


※ This manual is written mainly for frequently used functions. For details, please refer to separate manual.

Product Configuration

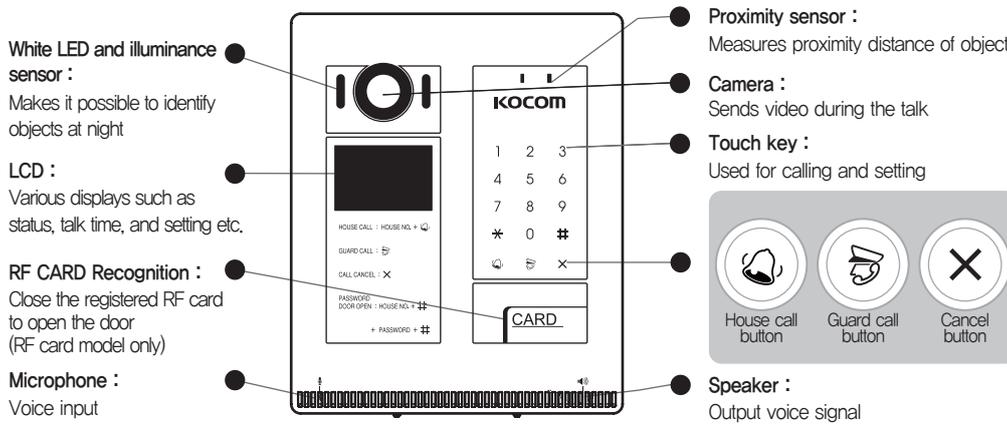

Precautions

1. Used by many people, this unit should be used with great care.
2. Being an electronic appliance, this unit should not be cleaned with water.
3. Being shocked, this unit will be damaged, resulting in a short circuit or malfunction
4. Do not disassemble it
5. The case may be deformed or destroyed if fire arms are nearby.
6. Do not shock the product with sharp objects.
7. Stickers or foreign objects on the front of the unit may interfere with operation, so do not attach them.

Calling house

House Number. ▶

- ▲ Enter the House Number.
- ▲ Press the right .
- If you want to call House Number [1001], continuously, if you pressed the wrong house number or cancel the call, use the button.

Call the guardphone



- ◀ Press the right .
- When you press the , it will be called to the designated guardphone.
- If errors occur more than 3 times when opening and closing the door connected to lobbyphone using the password, the call is automatically made to the guardphone.

Open the Lobby phone

- Call house : Call the house to open the door.
- Call guardphone : Call the guardphone to open the door.
- Use house password : Use the house password set for house.

House Number ▶ ▶ House password ▶

(If it is wrong more than 3 times, it will be called to the guardphone.)
※ The lobby phone must be set to use house password.

- Use of RF-CARD : When the registered card is close to the RF card recognition, the door opens. (This function is limited to the K6B LP-35S model.)
- Use of public password : Use the public password set in the lobby phone. (This function is limited to the K6B LP-35S model.)

▶ Public ▶

※ You can use it only when the lobby phone is set to use of house password

- Use guard password : Uses the guard password set in the guard room. (This function is limited to K6B LP-35S model.)

Guard Number ▶ ▶ Guard password ▶

(If it is wrong more than 3 times, it will be called to guard room.)

Set house password

※ This is only possible when you are in a talk with a house.

While the line is connected (talking status) between lobby phone and monitor, follow below step.



- To change the house password for house 1001, Press the continuously to call the house, and press the button to enter the 4-digit house password you want and then, press to complete the house password setting and end the call.

Precautions when moving in

Please contact our Customer Support Team if you want to remove / attach the house monitor. Interior / papering workers or residents should keep in mind that they will be charged for repair costs of defects caused by removing / attaching the product or interior / papering operation without consulting us.

Precautions when entering the Lobby phone

Some smartphone USIM cards and transportation cards (credit cards including transportation cards) have duplicate unique IDs, which may cause security problems when used as an access card for a lobby phone or door lock.

Do not register or use a smart phone, transportation card, etc. for access, but please use RF card or tag key only for KOCOM.

If you are using your smartphone or transportation card for the lobby phone or digital door lock, please be sure to cancel registration.

If you need to cancel the registration of your smartphone or transportation card, or reissue the RF card, please contact the apartment management office.