

Warranty



To receive after-Sales service, have the following ready when you contact our branches.

1. Name of the product.
2. Model number of the product.
3. The area of problem.
4. Phone number and address at which you can be contacted.

Warranty Card

PRODUCT	
MODEL	
DATE PURCHASED	
WARRANTY PERIOD	
AGENCY ADDRESS	

☉ KOCOM Warranties the original purchaser of this product as follows.

- 1) This product is produced under strict quality control and inspection procedures.
- 2) If this product breaks down during proper use as a result of product defect, KOCOM will repair it within one year from date of purchase free of charge.
- 3) The following cases will be subject to charge, even during warranty period:
 - a. Breakdown during transport, or through careless treatment, by consumer.
 - b. Breakdown cause by unauthorized repair, or system modification.
 - c. Breakdown caused by natural disaster or power disorder.

This manual is based on the date as shown in the right and specifications are subject to change without notice for quality improvement.

KIP-612ML W1031


KOCOM

MULTIPLE INTERPHONE

KIP-612ML User's Manual for Operation and Installation

- Dual Communication
- Power : DC 24V (Common)
- Distance of Communication : 300M,
In Use 0,8 ϕ - 1Km

Thank you very much for purchasing KOCOM multiple interphone. Please read this manual thoroughly to ensure correct usage, before operating.

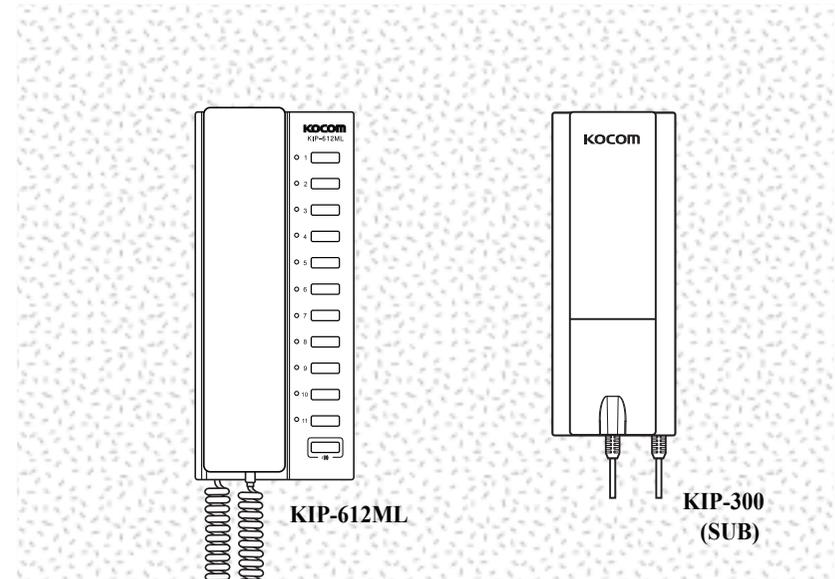

KOCOM CO.,LTD.


Product Specification

POWER : DC 24V(1.2A)
 POWER CONSUMPTION : 0.85W (UN LOAD)
 1.7W (IN LOAD)
 Wiring : 2 wires (Non polarity)
 Max. communication distance : TIV 0.8 (2Km)
 Gentle electronic sound

■ COMPOSITION

- INTERPHONE MASTER (KIP-612ML)
- ADAPTOR (APO-2420 ※ Option)
- INTERPHONE SUB (KIP-300)


Wiring Diagram

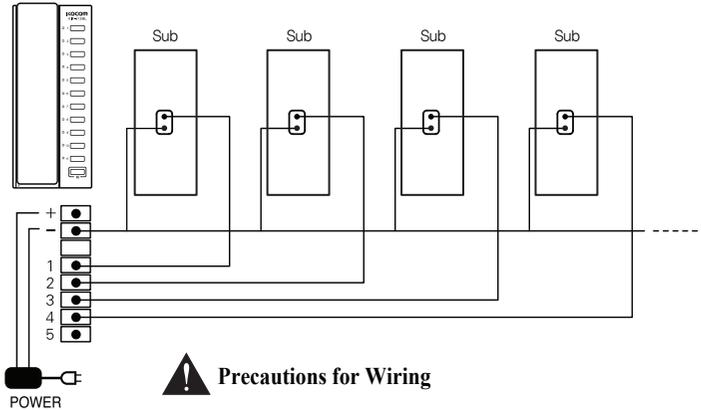

⚠ Precautions for Wiring

- As incorrect wiring may cause the device's non-operation or poor communication quality, please carefully conduct wiring work.
- When connecting a wiring chord to a terminal, loosen screw, insert the end of the chord into the bottom part of screw, and tighten the screw.
- When fixing wiring chord, use stapler not to cause damage to the chord.
- When using existing wiring, please be cautious not to cause disconnection and short-circuit.


Name of Each Part

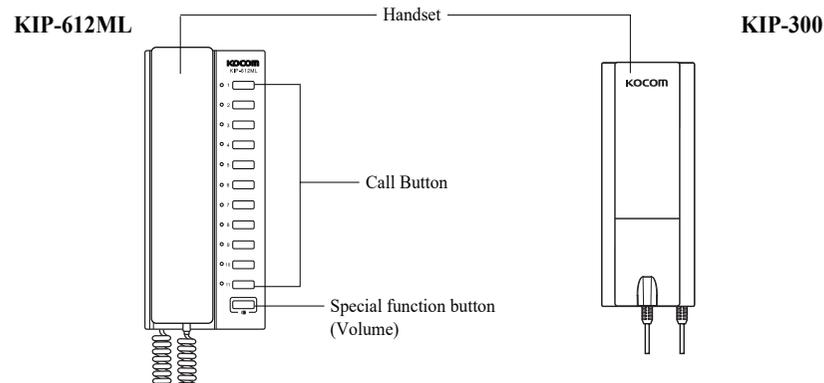

※ Special function button : This button is volume button for adjust ring sound (UP/DOWN).

How to Installation


※ Installation way of master & Sub are same.

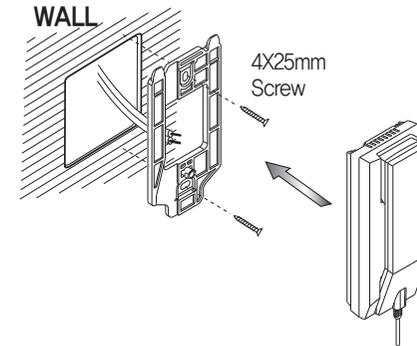

- Place bracket on the wall and fix it with screws. After wiring, fit the rear side of main frame to a groove in the bracket and pull the main frame down to fix.
- Avoid connection after wiring.


How to Operate (Instruction for Operating)

Making Call

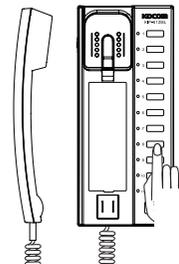


- Pick up handset of master and push a button which you want.

Call from Master

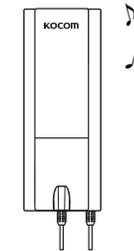

- Speaker outputs tone sound "Ding-Dong"

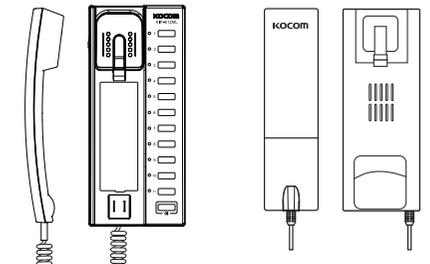

- To communication, please picking up handset.
- Hang up handset, communication is ended.