



Name of Each Part

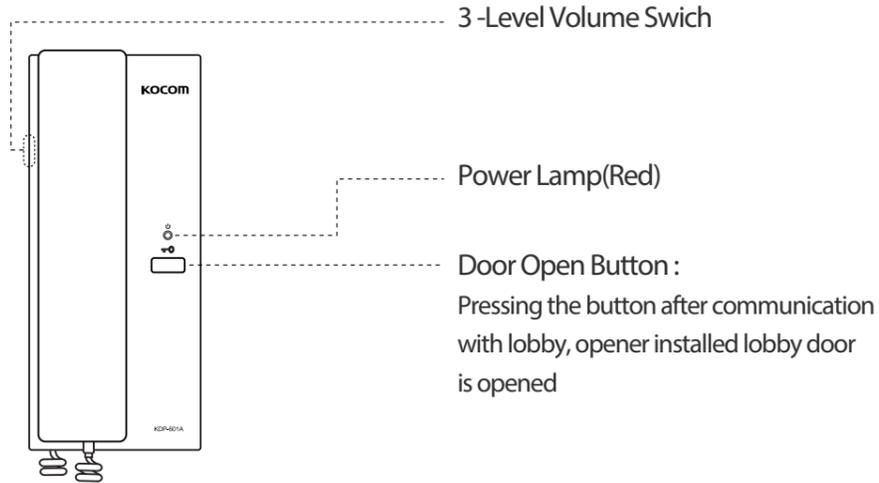

Specifications

Model	KDP-X601Gi
Power	AC 100-240V~, 50/60Hz
Mount Type	Surface Mount
Speak Mode	Handset
Operating Temperature	0 ~ 40 °C
Wiring	3 Wire x 2
Dimension	92(W) x 210(H) x 57(D) mm

Installation

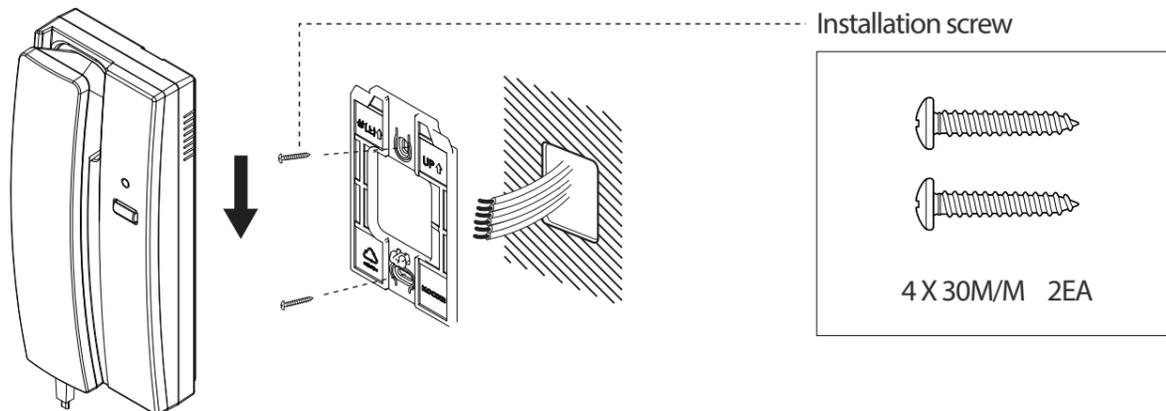

- Choose a place on the wall where you want to hang the DOOR PHONE.
- Fasten the wall hanger on the wall.
- DOOR PHONE can be hung on the wall hanger easily now.



- The standard installation height of product is under 2,000mm from floor.
- The product should be installed in an easily accessible location near an electric outlet in case an emergency shutdown is needed.

View the full version of Precautions



Warnings

Warnings for Usage

- Do not give any damage, break and modify the plug. Overloading, heating, pulling causes the damage.
- Do not use the power terminal at the units to other electric device except the designed device.
- Do not install the unit when the power is on.
- Install the circuit breaker after checking the safety such as electric shock and leakage. Turn off the power before you install or A/S.
- Power must be connected to domestic voltage (product rated voltage) consent or interior wiring.
- Connect the lines after peeling the wires properly.
- Do not distribute signal line with AC line.

Cautions for Use

- This unit is not designed for security purpose.
- Do not handle the unit with the wet hands.
- Do not place a pot with water or a small metal material in the units.
- Do not cover the ventilating opening or put any metal material in the units.
- During thunderstorms, avoid using this unit.
- There may be a remote risk of an electric shock from lightning.
- Do not modify the unit.
- Open the main gate after checking ID if the image and sound system do not work. Call A/S.
- Do not disassemble the back and cabinet cover.

Cautions for Abnormality

- Change the damaged electric code.
- Unplug this unit from plug socket and refer servicing to an authorized service center when the following conditions occur:
 - Unplug this unit from plug socket and refer servicing to an authorized service center when the following conditions occur:
 - liquid has been spilled into the unit.
 - the unit does not work normally by following the operating instructions.
 - if the unit exhibits a distinct change in performance.
 - if the unit has been dropped or physically damaged.

Cautions

- The law limits distributing the power lines to an authorized person from government.
- The work from an unauthorized person cause fire or electric shock.
- Even if your product is water proof, do not install it started place of water leakage, which can a short circuit.
- Avoid installing near tools with strong electromagnetic waves such as microwaves and cell phones, or it may cause picture distortion.
- Do not install monitor in following places:
 - Above or around water heater, rice-cooker, heater
 - Place exposed to direct rays of the sun
 - Place with high humidity such as bathroom, washroom, heated room
 - Place with a lot of gas, dust, smoke
 - Dangerous place with sprays of water or chemicals
- Beware of occurrence of image quality deterioration or malfunction from cause of humidity due to penetration of chemicals or water into camera's urea resins to prevent air circulation.
- The communication lines should be built in being distant from the power source.
- This may result in the risk of fire, electric shock and communication disorder.
- Setting the communication lines in a high humid place such as outside without any protection from rain causes the communication disorder.
- Think about the thickness and quality of wall material. The unqualified material may make the device fall.
- Set the device of the wall-mounted type not to fall. Falling from an earthquake causes personal injury.

Cautions for Repairs and Maintenance

- Keep the inside of the device clean. Having the dust inside without any cleaning for a long time causes the fire.
- If necessary, contact your dealer or service center to get cleaning service.
- Unplug this device when you try to move it to another place. If there is no plug, please, turn off the circuit breaker, please contact your dealer or service center.

Warranty

To receive after sales service, have the following ready when you contact our branches.

- Name of the product.
- Model number of the product.
- The area of problem.
- Phone number and address at which you can be contacted.

Warranty Card

PRODUCT	
MODEL	
DATE PURCHASED	
WARRANTY PERIOD	
AGENCY	
AGENCY ADDRESS	

☉ **KOCOM** Warranties the original purchaser of this product as follows.

- This product is produced under strict quality control and inspection procedures.
- If this product breaks down during proper use as a result of product defect, KOCOM will repair it within one year from date of purchase free of charge.
- The following cases will be subject to charge, even during warranty period :
 - Breakdown during transport, or through careless treatment, by consumer.
 - Breakdown caused by unauthorized repair, or system modification.
 - Breakdown caused by natural disaster or power disorder.

KOCOM CO.,LTD.

This manual is based on the date as shown in the right and specifications are subject to change without notice for quality improvement.


KDP-X601Gi Y0627

KOCOM

DOOR PHONE

KDP-X601Gi Manual for Operation and Installation

- KDP-X601Gi : 100-240V~, 50/60Hz
- Compatible product : KVL-TC3XXi series
- Maximum wiring distance (UTP CAT5e) KVL-TC3XXi to last DoorPhone --100m
(Resistance value of completed wiring installation: less than 10 Ohms)

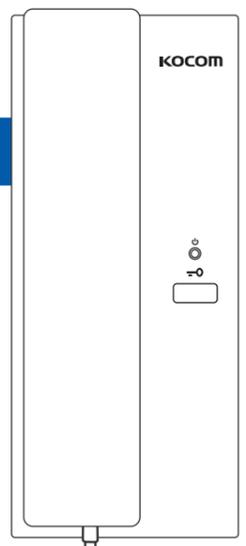


KOCOM CO.,LTD.

Thank you very much for purchasing KOCOM Doorphone. please read this manual thoroughly to ensure correct usage, before operation



Wiring Diagram

When connecting KDP-X601Gi to KVL-TC3XXi series, the Video line of KVL-TC3XXi (pins 4, 8) is not connected.

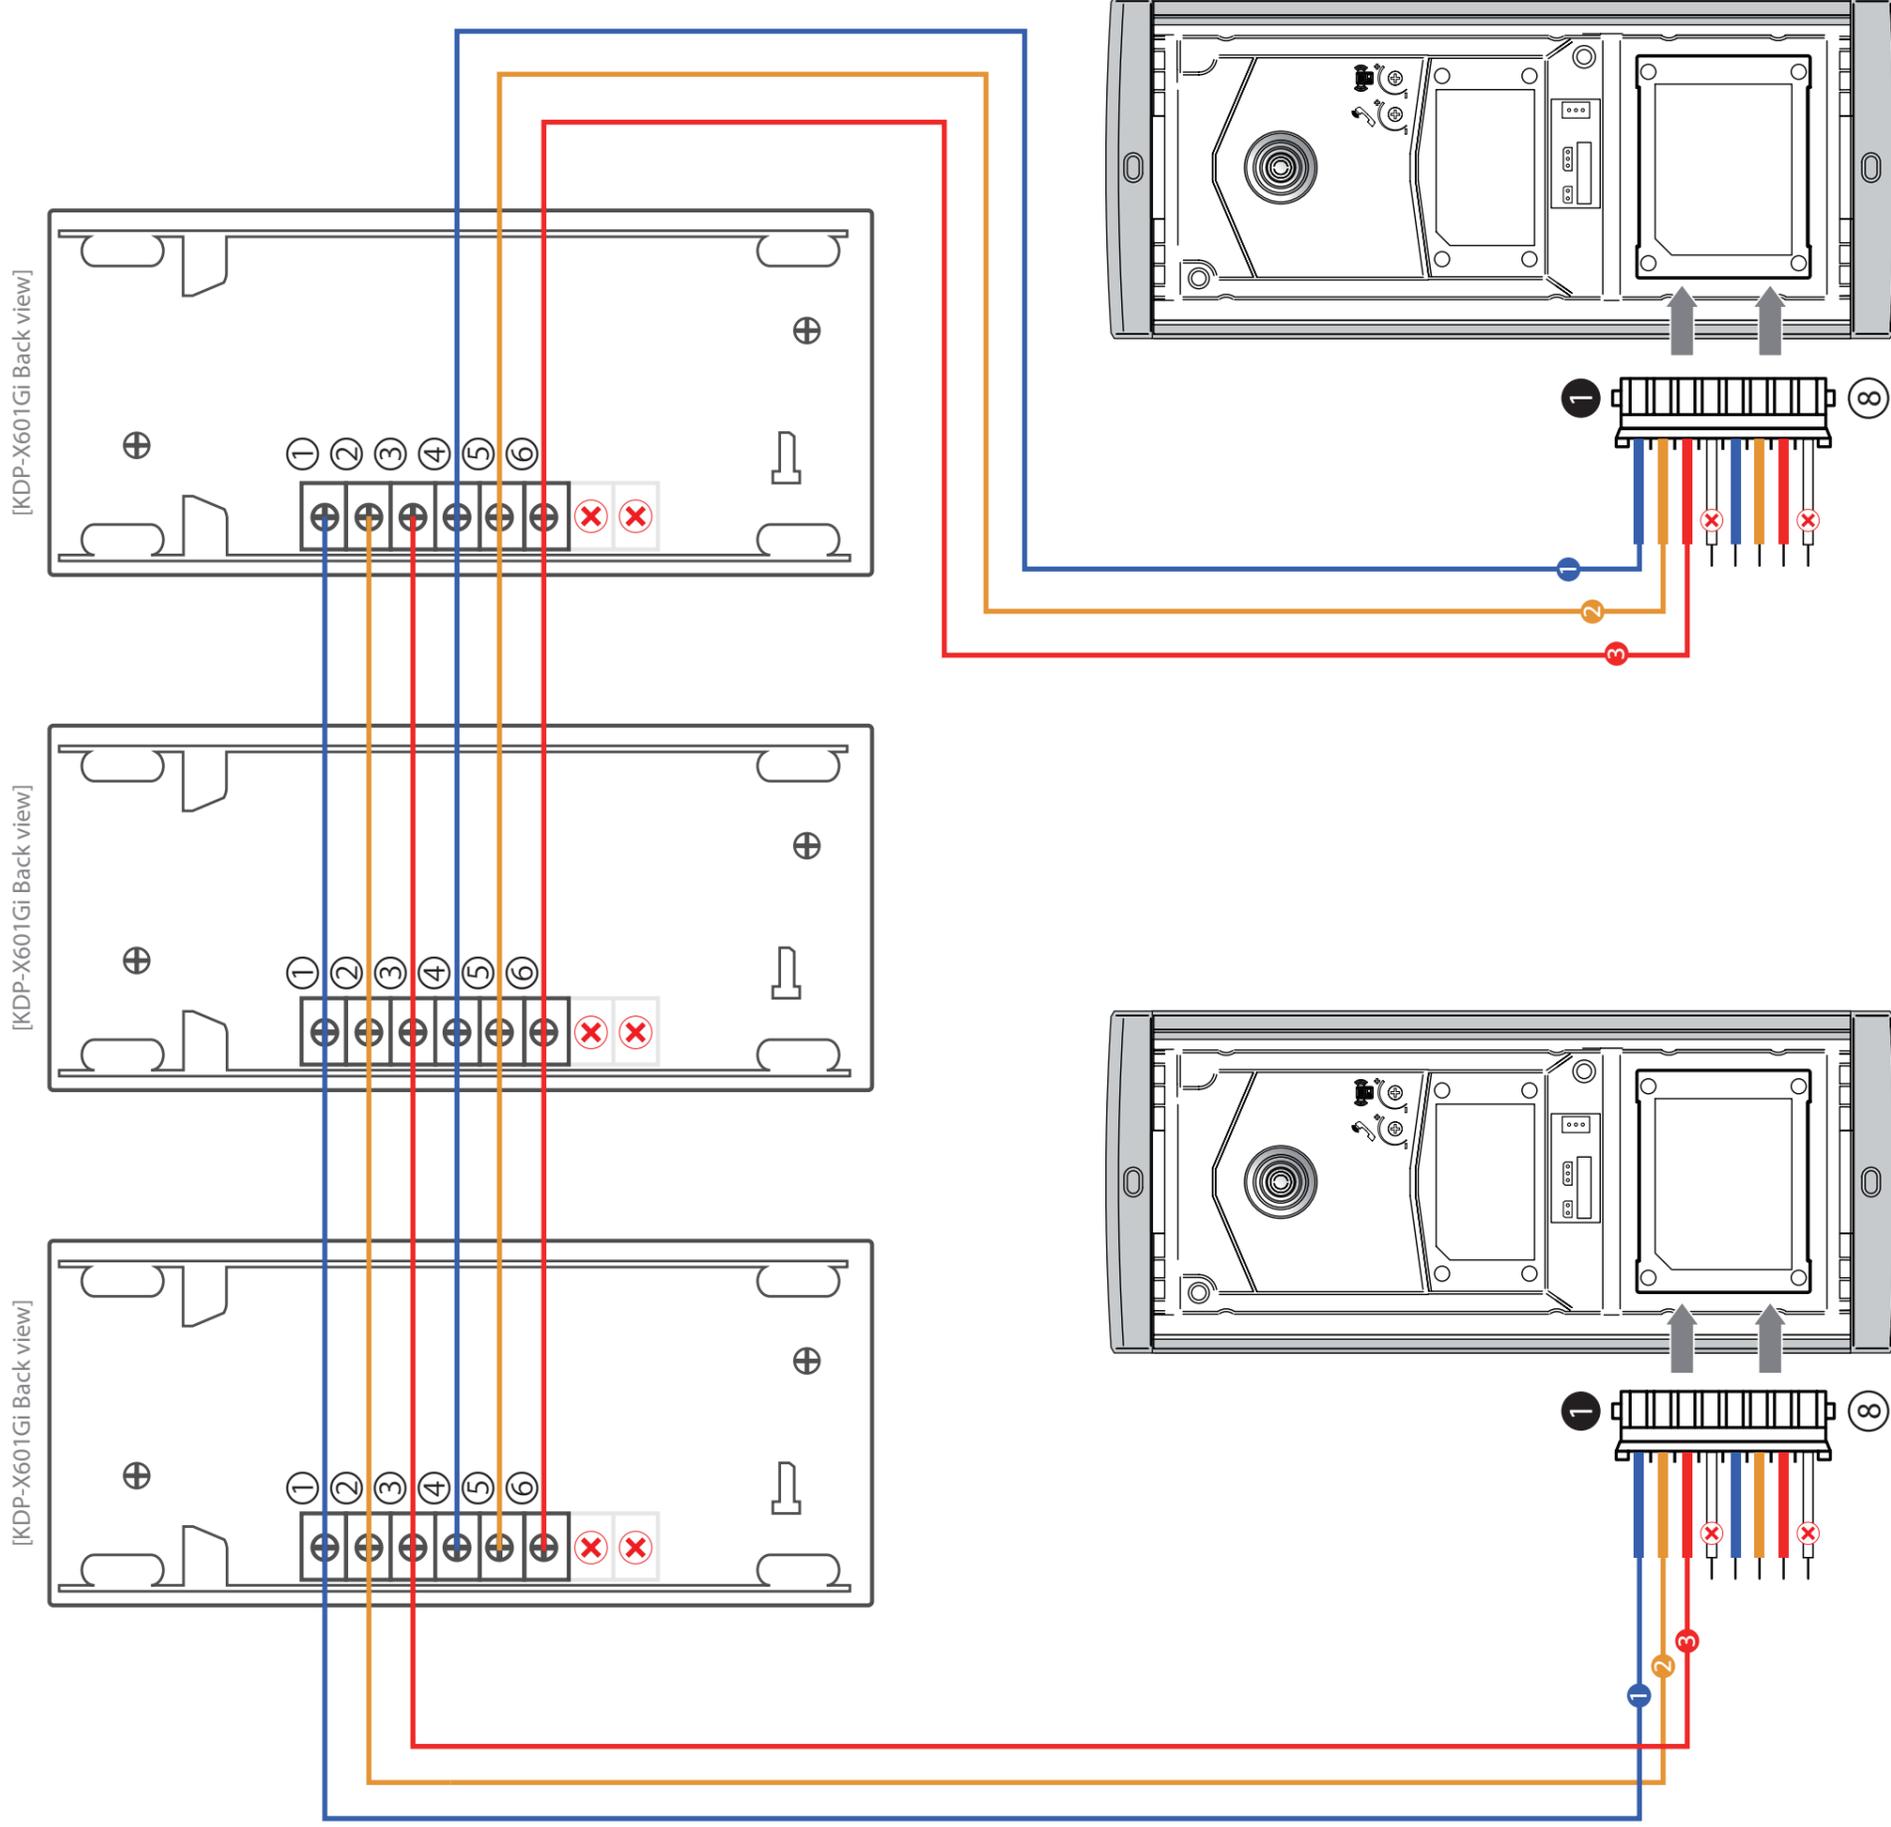

[KVL-TC3XXi Series Lobbyphone Back view]

[KVL-TC3XXi Series Lobbyphone Back view]

KVL-TC3XXi Series							
①	CAM VCC						
②	CAM GND						
③	CAM Voice						
④		✗					
⑤	CAM VCC						
⑥	CAM GND						
⑦	CAM Voice						
⑧							✗

KDP-X601Gi							
①	CAM1 VCC						
②	CAM1 GND						
③	CAM1 Voice						
④	CAM2 VCC						
⑤	CAM2 GND						
⑥	CAM2 Voice						
⑦						✗	✗
⑧							✗

KDP-X601Gi							
①	CAM1 VCC						
②	CAM1 GND						
③	CAM1 Voice						
④	CAM2 VCC						
⑤	CAM2 GND						
⑥	CAM2 Voice						
⑦						✗	✗
⑧							✗

KDP-X601Gi							
①	CAM1 VCC						
②	CAM1 GND						
③	CAM1 Voice						
④	CAM2 VCC						
⑤	CAM2 GND						
⑥	CAM2 Voice						
⑦						✗	✗
⑧							✗

KVL-TC3XXi Series							
①	CAM VCC						
②	CAM GND						
③	CAM Voice						
④		✗					
⑤	CAM VCC						
⑥	CAM GND						
⑦	CAM Voice						
⑧							✗